



Ultimate Adjustable Trigger Assembly

Only qualified personnel should attempt assembly.

Step 1



Lay the trigger shoe on a flat surface as shown.

Step 2



Insert the safety lever spring into the slot as shown.

Step 3



Align the trigger bar over the safety lever spring and align the trigger bar hole with the hole in the trigger shoe.

Step 4



Insert the pin through the trigger bar and into the trigger shoe. If needed, use pliers to help seat the pin.

Step 5



Align the safety lever to capture the safety lever spring and align the pivot hole with the hole in the trigger shoe.

Step 6



Insert the pin through the safety lever and into the trigger shoe. If needed, use pliers to help seat the pin.

Step 7



Install the side plate. Take care to ensure alignment, fitment is precise so take your time. Seat the sideplate fully.

Step 8



Install the side plate screw with the included wrench and snug the screw.
DO NOT OVERTIGHTEN. Loctite® 222MS (purple) thread locker may be used to prevent screw loosening.